

V DOT RB

Moving head

Function	DMX Value	Setting	10 CH	14 CH	18 CH
X axis	000-127	0-540°	1	1	1
X axis adjust finely	000-255	0-100%		2	2
Y axis	000-127	0-270°	2	3	3
Y axis adjust finely	000-255	0-100%		4	4
P/T Speed	000-255	Fast to slow		5	5
X axis non polar	000-015	No functions	3	6	6
	016-135	Forward slow to fast			
	136-255	Backward slow to fast			
Y axis non-polar	000-015	No functions	4	7	7
	016-135	Forward slow to fast			
	136-255	Backward slow to fast			
Dimmer	000-255	0-100%	5	8	8
Beam Red	000-255	0-100%		11	15
Beam Green	000-255	0-100%		12	16
Beam Blue	000-255	0-100%		13	17
Beam White	000-255	0-100%		14	18
Strobe	000-010	Strobe close	6	9	
	011-128	Slow to fast optional strobe			
	129-255	Slow to fast linear strobe			
Strobe	000-010	No functions			9
	011-255	Slow to fast linear strobe			
Strobe	000-010	No functions			10
	011-255	Slow to fast optional strobe			
Function	000-005	No function	10	10	14
	006-010	Show1			
	011-020	Show2			
	021-030	Show3			
	031-040	Show4			

Function	DMX Value	Setting	10 CH	14 CH	18 CH
Function	041-050	Show5	10	10	14
	051-060	Show6			
	061-070	Show7			
	071-080	Show8			
	081-090	Slave1			
	091-096	Slave2			
	097-160	Sound (sensitivity increasing from 097-160)			
	161-170	Pan invert			
	171-180	Tilt invert			
	181-190	Pan normal			
	191-200	Tilt normal			
	201-220	Black out during pan/ tilt movement			
	221-240	Reset after 5 seconds			
	241-255	No function			
color	000-007	No function	7		11
	008-013	Color1 (R255 G000 B000 W000)			
	014-020	Color2 (R255 G000 B000 W100)			
	021-027	Color3 (R255 G000 B000 W200)			
	028-034	Color4 (R255 G050 B000 W000)			
	035-041	Color5 (R255 G150 B000 W000)			
	042-048	Color6 (R255 G255 B000 W000)			
	049-055	Color7 (R255 G255 B000 W075)			
	056-062	Color8 (R000 G255 B000 W255)			
	063-069	Color9 (R000 G255 B000 W150)			
	070-076	Color10 (R000 G255 B000 W050)			
	077-083	Color11 (R000 G255 B000 W000)			
	084-090	Color12 (R000 G255 B050 W000)			
	091-097	Color13 (R000 G255 B150 W000)			
	098-104	Color14 (R000 G255 B255 W000)			
	105-111	Color15 (R000 G255 B255 W075)			
	112-118	Color16 (R000 G255 B255 W150)			
	119-125	Color17 (R000 G100 B255 W255)			
	126-132	Color18 (R000 G000 B255 W100)			
	133-139	Color19 (R000 G000 B255 W050)			
	140-146	Color20 (R000 G000 B255 W000)			
147-153	Color21 (R075 G000 B255 W000)				



Function	DMX Value	Setting	10 CH	14 CH	18 CH
Color	154-160	Color22 (R160 G000 B255 W000)	7		11
	161-167	Color23 (R255 G000 B255 W000)			
	168-174	Color24 (R255 G000 B175 W000)			
	175-181	Color25 (R255 G000 B100 W000)			
	182-188	Color26 (R255 G000 B100 W050)			
	189-195	Color27 (R255 G000 B025 W050)			
	196-202	Color28 (R255 G000 B025 W025)			
	203-209	Color29 (R255 G000 B025 W000)			
	210-216	Color30 (R000 G000 B000 W255)			
	217-223	Color31 (R075 G075 B000 W255)			
	224-230	Color32 (R000 G000 B100 W255)			
	231-255	Color33 (R255 G255 B255 W255)			
Color running	000-015	No function	8		12
	016-031	Jump1			
	032-047	Jump2			
	048-063	Jump3			
	064-079	Jump4			
	080-095	Jump5			
	096-111	Jump6			
	112-127	Jump7			
	128-143	Jump8			
	144-159	Fade1			
	160-175	Fade2			
	176-191	Fade3			
	192-207	Fade4			
	208-223	Fade5			
	224-239	Fade6			
240-255	Fade7				
Color running method speed	000-255	Slow to fast	9		13

