

VLED 606

LED Par

DMX mode 1: 6CH

CH1	CH2	CH3	CH4	CH5	CH6
R (0-255)	G (0-255)	B (0-255)	W (0-255)	A (0-255)	I (0-255)

DMX mode 2: 8CH

CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Dimmer	R	G	B	W	A	I	Strobe
0-255	0-255	0-255	0-255	0-255	0-255	0-255	0-255

DMX mode 3: 10CH

CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8		CH9		CH10
Dimmer	R	G	B	W	A	I	PROGRAM		SPEED		Strobe
0-255	0-255	0-255	0-255	0-255	0-255	0-255	CH1-6	0			
							Pr. 01	1-20	OFF	0	
									R	1-16	
									G	17-33	
									B	34-50	
									W	51-67	
									A	68-84	
									I	85-101	
									RG	102-118	
									RG	119-135	
									RB	136-152	
									RB	153-169	
						GB			170-186		

DMX mode 3: 10CH

CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8		CH9		CH10
0-255							Pr. 01	1-20	RW	187-203	0-255
									GW	204-220	
									BW	221-237	
									WW	238-254	
									CW	255	
							Pr.02	21-41	Program Speed 0-255		
							Pr.03	42-62			
							Pr.04	63-83			
							Pr.05	84-104			
							Pr.06	105-125			
							Pr.07	126-146			
							Pr.08	147-167			
							Pr.09	168-188			
							Pr.10	189-209			
Pr.11	210-230										
Pr.12	231-251										
Sound	252-255										

